

User and Maintenance Guide






ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual.

External battery charger



1a. Switch off charger by pressing the STOP button. Unplug charger cable from red battery plug. Reconnect the red battery plug to the machine.

Machine with battery charger

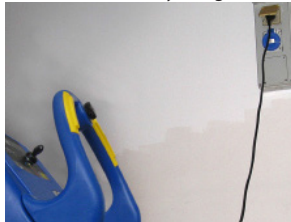

1b. Disconnect the battery charger cable from the electrical main.



2. Fill the tank with a clean water. The clean water temperature must not exceed 40 °C.



3. Fill the EcoFlex™ tank with a detergent suitable for the work to be performed (highly concentrated detergent).




4. Install the squeegee and fasten it with the handwheels, then connect the vacuum hose to the squeegee.



5. Place the brush or the pad-holder under the deck. Use the appropriate brush to clean the floor. Lower the deck by pressing the pedal deck.




6. Turn the ignition key to "I", then lower the deck by pressing the Green switch. To engage the brush, slightly press the drive paddle and then release it.

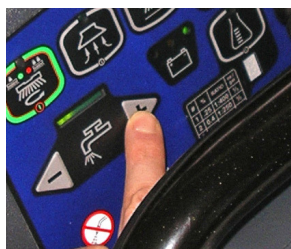

7. Press the solution flow control switches as necessary, depending on the type of cleaning to be performed.



8. Press the detergent flow control switch. The number of display shows the detergent concentration level in the solution (see the table on the label). See the User Manual for setting change.

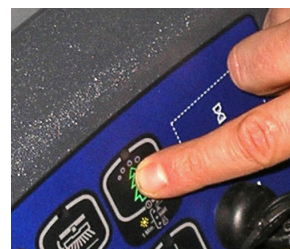

9. Press the EcoFlex™ switch whenever you temporarily need a greater cleaning power.



10. Lower the squeegee with the lever.




11. Push the drive paddle for starting floor cleaning. If solution applied flows outside the brush housing during use, reduce the flow of solution. Switch off the machine using the key.



12. At the end of the work. Empty the recovery tank with the hose. Then empty the solution tank with the transparent hose



13. Wash with clean water the recovery tank and the vacuum grid.

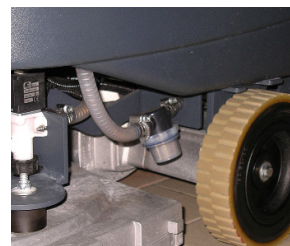

14. Clean the filter: 1) Close the solution tap under the machine. 2) Remove the transparent cover and the gasket, then remove the filter strainer.



15. Press the switch and wait for the brush to fall on the floor. Remove the brush and clean them.



16. Take the squeegee off and remove debris. Check and clean the squeegee blades.



17. Clean the machine using a damp cloth and where needed use a neutral cleaning product.



18. Charge the batteries: Connect the battery charger cable from the electrical main.



19. Park the machine with the recovery tank cover open.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS