

# TROUBLESHOOTING

1) The machine will not start:

- Check the earth leakage.
- Check the supply voltage.
- Check the cables for damage.
- Contact your supplier.

2) The machine makes a rattling sound. **STOP IMMEDIATELY!!**

**CHECK THE MACHINE BEFORE CONTINUING WORK!!**

- An oscillating rubber is loose: Tighten!
- A rubber has torn: Ensure that it is replaced!
- The eccentric bearing is worn: Ensure that it is replaced!

