

# TROUBLESHOOTING

- 1) The machine will not start:
  - Check the earth leakage.
  - Check the supply voltage.
  - Check the cables for damage.
  - Contact your supplier.
  
- 2) The machine makes a rattling sound. **STOP IMMEDIATELY!!**  
**CHECK THE MACHINE BEFORE CONTINUING WORK!!**
  - An oscillating rubber is loose: Tighten!
  - A rubber has torn: Ensure that it is replaced!
  - The eccentric bearing is worn: Ensure that it is replaced!

