



QUICK-START MANUAL



www.crescentindustrial.co.uk



SHORT DESCRIPTION

The EX43-OCS has been developed to make it easy to clean edges, corners and small areas. When used with special pads, these machines can also be used to strip or grind/polish parquet floors without the use of chemicals. The plastic bumper around the machines makes it possible to work accurately in corners. The Topfloor Oscillating orbital floor cleaning method combines an orbital rotation of 140 rpm, but also simultaneously makes 1,400 small eccentric rotations of Ø 2.2 cm, the piles are shaken and the microfiber pad scrapes the carpet fibres clean in every direction. This makes the effect of the pads unrivalled. The machine is easy to use and requires no effort, because it is as if the machine hovers over the floor.

Specifications:

Required connections: 220 VAC, 50-60 Hz, 8 A with protective earthing and residual current device!

SAFETY



WARNING!

Almost all accidents are the result of: reduced concentration, inadvertence, negligence or misjudgement! Work slowly and carefully: You have been warned!



NOTE!

You are using an electric machine and (scrubbing) water. Make sure the Protective earthing and residual current device work correctly. Regularly check the power cable for damage. Repair a damaged cable immediately, even if the damage is small. Consider your own safety!

Wear hearing protection!

Wear a dust mask when dry sanding!

Wear safety shoes with rubber anti-skid soles!

Remove the plug from the plug socket: – Immediately after finishing the work.

- When changing the pad.
- During maintenance
- During repairs.



USE

- Check the colour fastness and the shape stability of the floor before cleaning the floor using the the Topfloor oscillating cleaning method.
- Carry the machine to the location where it is going to be used.
- Before using the machine, make sure the right pad for the job is fitted to the machine.
- Make sure the switch is in the **OFF** position.
- Insert the plug into an earthed plug socket.
- Place the switch in the ON position. The engine starts and the pad starts moving. NEVER ALLOW THE MACHINE TO RUN WHILE IT IS NOT BEING MOVED. THIS CAN DAMAGE THE FLOOR.
- When working, you can effortlessly move the machine in every direction. Work in straight lines (forwards and backwards), not by moving the machine from left to right.
- Immediately turn off the machine when you stop working so as not to damage the floor. Remove the plug from the plug socket.



MAINTENANCE

Daily

- Check the pad for wear. A worn pad reduces the working speed, and cleaning performance.
- After using chemical cleaning products, wipe the machine down with a damp cloth to prevent the chemical product from affecting the stainless steel parts.
- Check for loose nuts and bolts.

Monthly

- Check whether the grip pad under the pad holder still provides enough grip to hold the pad firmly.
- Check the vibration rubbers for cracks.

Yearly

• Have the machine tested according to the compulsory regulations of the country where the machine is being used, to ensure it passes the occupational health and safety test for electrical machines.

Changing the pad

The pad is attached to the plate using Velcro.

- Turn off the machine.
- Remove the plug from the plug socket.
- Tip the machine on its side so that the handle rests on the ground and the pad is vertical.
- Pull the pad off the base plate.
- Carefully attach a new pad to the base plate and push it firmly in place.
- Return the machine to the upright position.
- Insert the plug into the plug socket.
- Turn on the machine. You can now continue using it.

This quick-start guide is intended for use as a brief user guide, and does not replace the operator's user manual – which is available online.



We supply a full range of cleaning equipment for rental or purchase.

For more information, or a cleaning solution to suit your business, please get in touch –

For a more comprehensive product range, please visit our website.

Distributed by:



Address

Crescent Industrial Ltd Berrington House, Berrington Road, Leamington Spa CV31 1NB

Contact

- t: 0845 33 77 695
- f: 0845 33 78 695
- e: info@c-ind.co.uk

www.crescentindustrial.co.uk