

TROUBLESHOOTING

1) The machine does not start:

- Check the earth leakage circuit breaker.
- Check the power supply.
- Check the cables for damage.
- Contact your supplier.

2) The machine makes a rattling sound:
STOP IMMEDIATELY!! CHECK FIRST!!

- A nut has vibrated loose from the ballast plates.
- A rubber from the pad holder is loose.
- The eccentric bearing is worn.

3) The adjustment mechanism of the handle does not work:

- The locking pin is bent.
- The spring is broken.

