

User and Maintenance Guide





SC2000

ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual.



External battery charger
1a. Unplug the Battery charger cable.
Reconnect it to the machine.
On board Battery charger
1b. Disconnect the battery charger
cable from the electrical socket.



2. Fill the tank with a clean water. The
clean water temperature must not
exceed 40 °C.
Make sure the solution valve under
the machine is open.



3. Fill the EcoFlex™ tank with a deter-
gent suitable for cleaning machines
(highly concentrated and low
foaming detergent).



4. Install the squeegee and fasten it
with the knob.



5. Place the brush or the pad-holder
under the deck. Use the appropriate
brush to clean the floor.



6. Insert the operator key, then start
the machine by pressing the One-
Touch button.



7. To engage the brush, press the
brush click-on button.



8. Push the drive pedal to start cleaning. 9. To change the solution flow level
Adjust the speed by the pressure on
the drive pedal.
For the reverse mode press the yellow
lever.



9. To change the solution flow level
push the solution button and
change flow level according to the
cleaning performance and applica-
tion.



10. If necessary press the extra pressure
function (hold for one second).
If necessary press the silent mode
button for extra low sound level.



11. Press the EcoFlex™ lever whenever
you temporarily need a greater
cleaning power.



At the end of the work

12. Machine with Ecoflex, always end the daily
work with turning off the detergent 2 minutes
before finishing by pressing the detergent but-
ton. To rinse out detergent from the system and
brush before handling and cleaning.



13. Empty the recovery tank with the
hose. Then empty the solution tank
with the transparent hose.



14. Empty the debris tray and clean/
wash the recovery tank inside.



15. Clean the filter:
A) Close the solution valve under the machine.
B) Remove the transparent cover and the gasket,
then remove and clean the filter inside.
C) Reassemble the filter.



16. Press the click-off button and wait
for the brush/pad holder to fall
on the floor. Remove to clean or
change brush.



17. Take the squeegee off and remove
debris. Check and clean the squeegee
blades.



18. Clean the machine using a damp
cloth and where needed use a neu-
tral cleaning product.



19. Charge the batteries: Connect the
battery charger cable to the electri-
cal socket.



20. Park the machine keeping the re-
covery tank cover open and hang-
ing the squeegee.

If the machine has been used until the low battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE THE CHARGER IS ALWAYS CONNECTED TO THE BATTERIES EVEN IF NOT USED FOR LONGER PERIOD OF TIME TO PREVENT DAMAGE TO THE BATTERY DUE TO LOW VOLTAGE