

# User and Maintenance Guide






**ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual.**



1. Check the battery charge gauge (and if necessary re-charge)



2. Check that the drive pedal is responding and all circuit breakers are armed

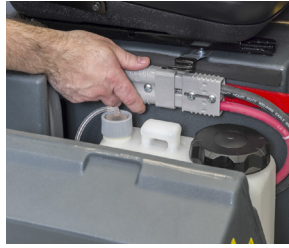

3. Check battery cables are well connected together



4. Recovery tank seal cover must correctly installed and in good condition



5. Inspect the squeegee blades for cuts or chunks



6. Install squeegee



7. Check the height of the squeegee by adjusting the castor wheels and the angle knob.



8. Open broom door compartment and check presence of ropes or debris that can block it.



9. Check presence of water in the solution tank.



10. If necessary open the solution filter cage and clean the net.



11. Install Brushes.



12. Adjust side skirts height



13. Make sure that deck and squeegee are moving down when pressing the button.



14. Adjust water flow.



15. Adjust detergent flow.



16. In case something does not work enter the Service test mode by pressing the Speed switch and the traction control switch, then on the key. Go through the menu.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS