

User and Maintenance Guide





ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual.




1. Check the Diesel fuel tank level / LPG bottle charge. In case re-fill/ change the LPG Bottle




2. Fill the tank with clean water. The clean water temperature must not exceed 40 °C



3. Fill the Ecoflex tank with a detergent suitable for the work to be performed (highly concentrated detergent)

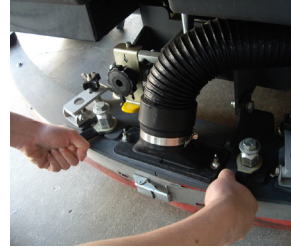

4. Install the squeegee and fasten it to its assembly then connect the vacuum hose to the squeegee

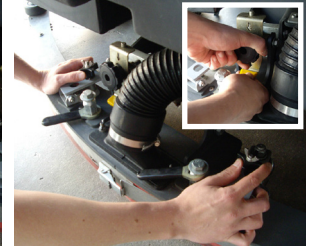

5. Adjust Squeegee height and inclination.



6. Install the cylindrical broom/side brush or brooms



7. Turn the ignition key to "I" and press the throttle button (if you want to raise your rpm from idle)



8. Lower the deck and select the desired scrubbing pressure (squeegee lowers automatically)




9. Adjust to the desired water flow



10. Adjust to the desired chemical concentration (shown in the display)



11. Press the forward pedal and start operating the machine – all functions will activate upon the motion of the pedal

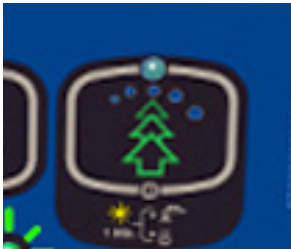

12. Press the EcoFlex™ switch whenever you temporarily need a greater cleaning power



13. Empty the recovery tank with the hose. Then empty the solution tank with the transparent hose



14. Wash with clean water the recovery tank and the vacuum grid. Remove and clean the debris tray



15. Close the solution tank valve and remove and clean the filter



16. Remove and clean the hopper



17. Remove and clean the brushes



18. Take the squeegee off, check the blades wear status



19. Remove the side skirts and check the blade status



20. Clean the machine using a damp cloth and park it with the recovery tank open