HUUVAN

Creating Clean, Protecting Health

HV240-ACS(C35)

INDUSTRIAL VACUUMS

PARTS LISTS & DIAGRAMS

www.crescentindustrial.co.uk/huuvan/

HV240-ACS (C35) Huuvan Vacuum

Full Parts Diagrams & Lists

IMAGE 1

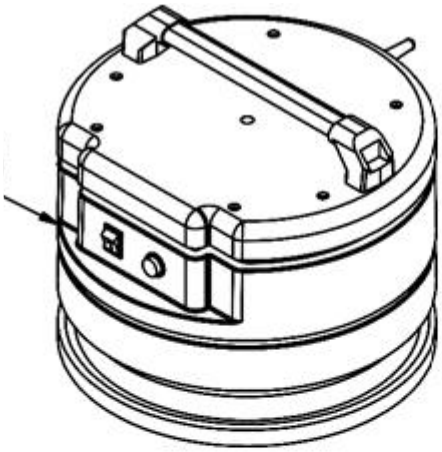

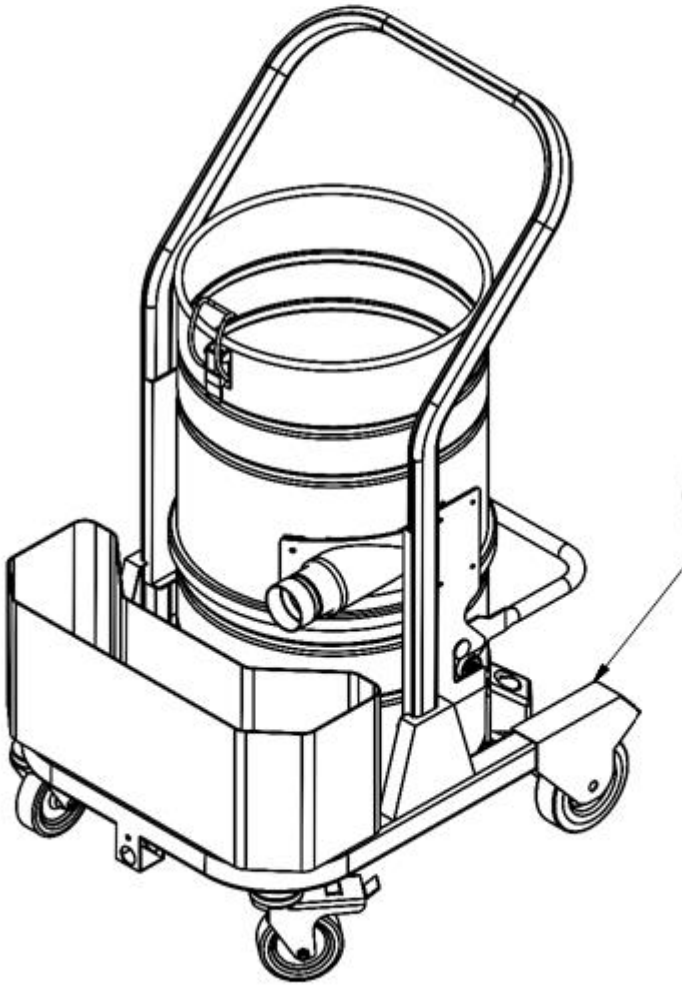

IMAGE 2

(IMAGE 1) HV240-ACS (C35) Parts Diagram - Vacuum Head

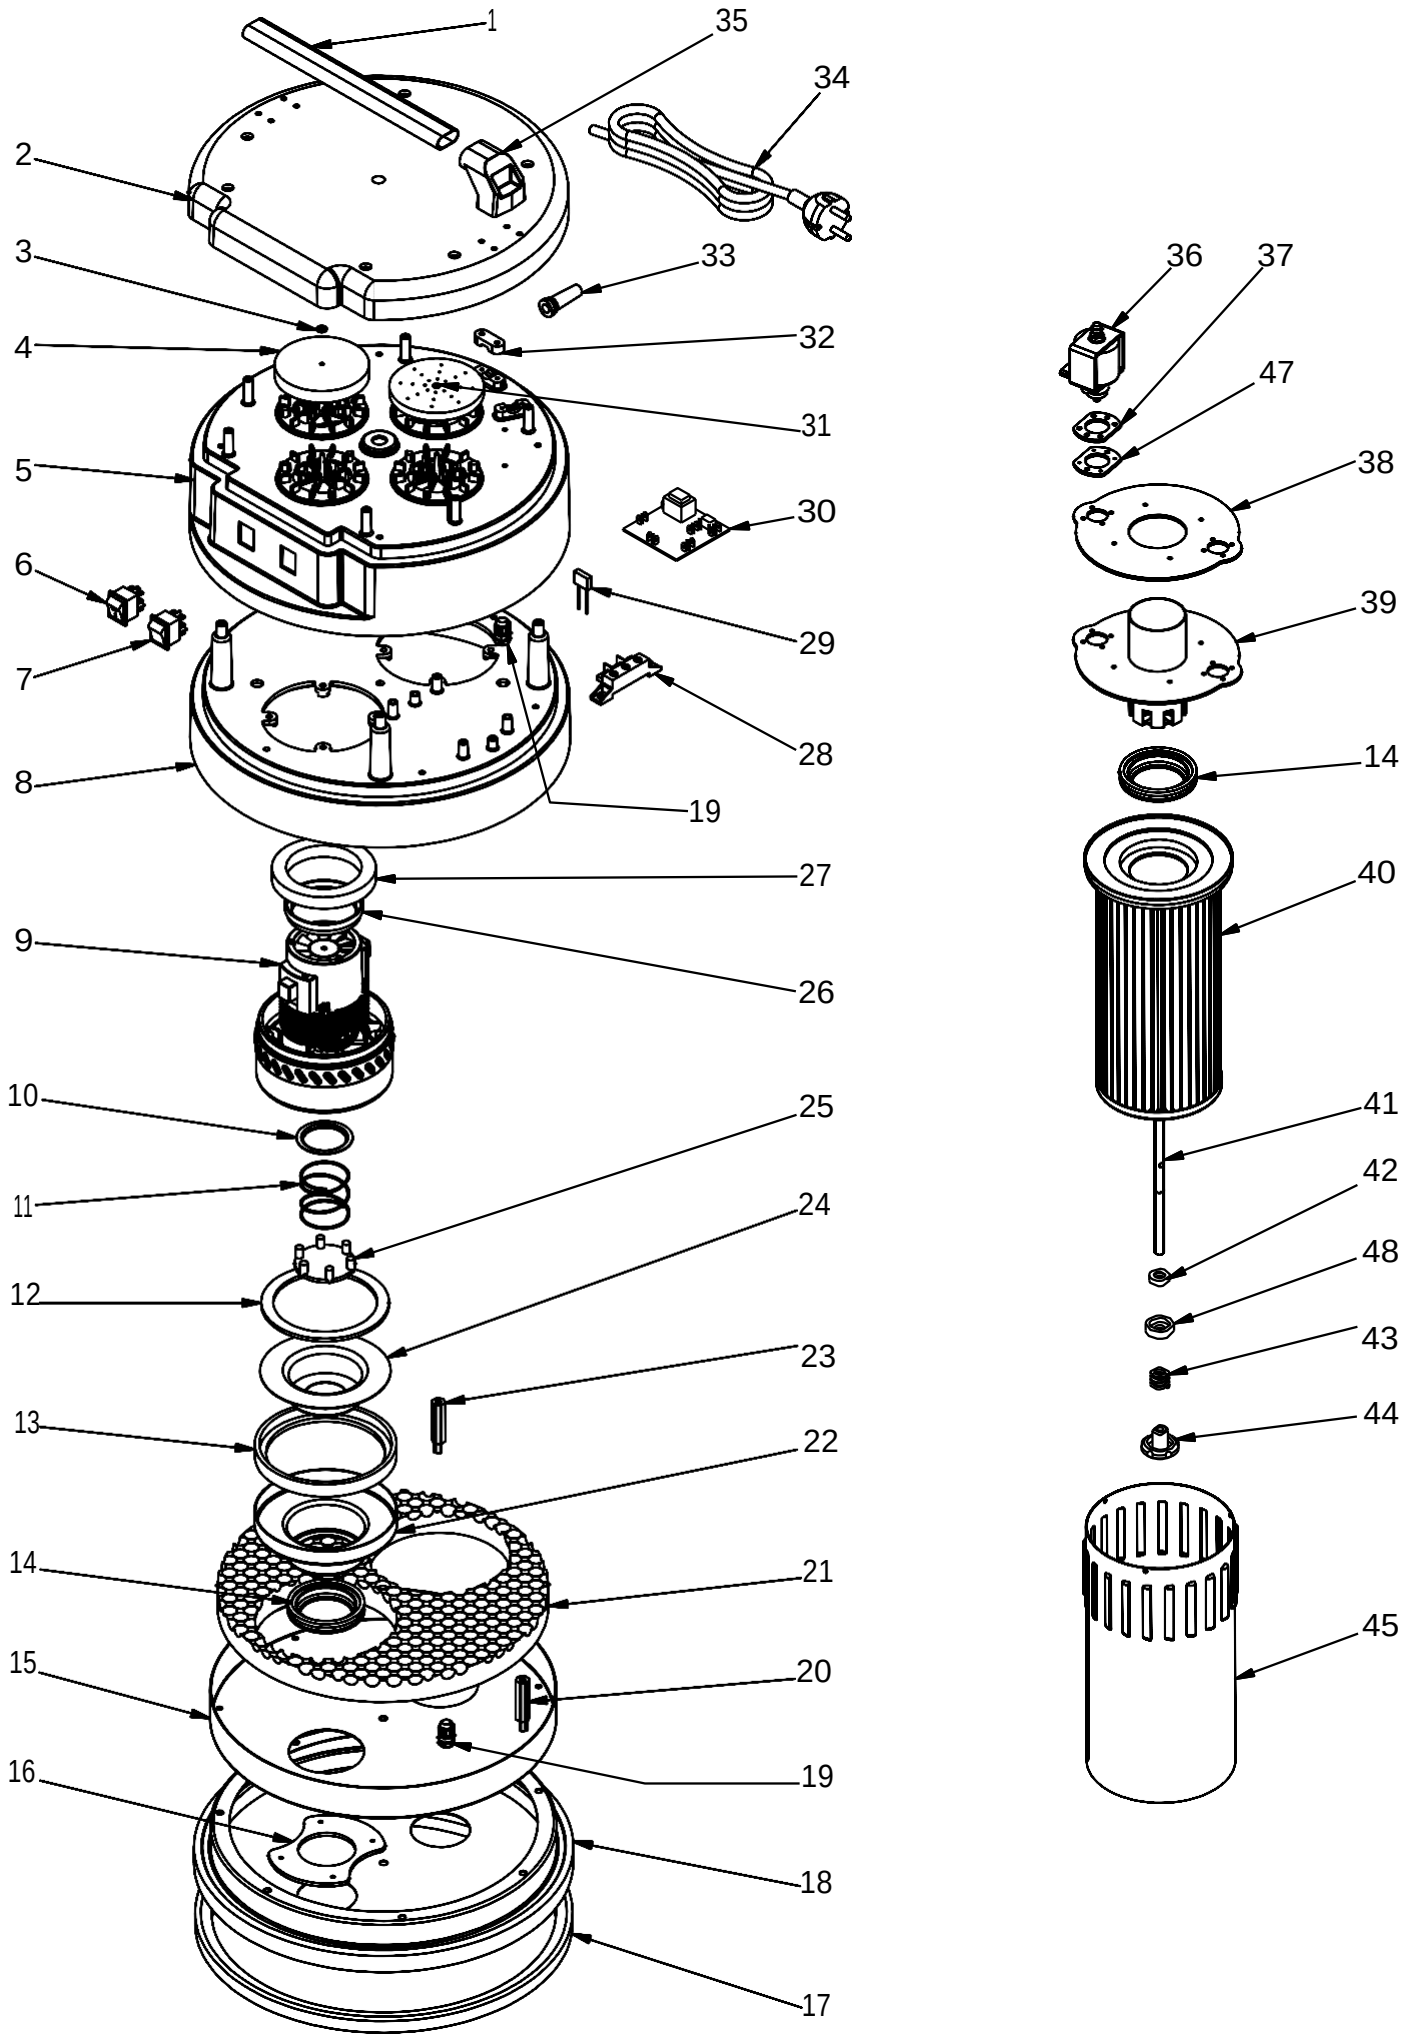

HV240-ACS (C35) Parts List - Vacuum Head

Position Number	Code	Description
1	010100	Handle
2	010200	Top Cover Plate
3	010300	Separator
4	010400	Foam Pad
5	060500	Motor Housing Cover
6	060600	20 Amp Switch
7	060700	Switch
8	010700	Middle Motor Housing Plate
9		Bypass Motor 1100W *RP113901 110V Motor* *RP113902 240v Motor*
10	061000	Spring Disk Valve
11	061100	Spring Valve
12	012200	Washer 135x98x4
13	012100	Seal L
14	013300	Grommet ø60
15	061500	Foam & Motor Holding Disk Plate
16	061600	Intake Flange
17	021600	Under-Head Gasket
18	061800	Motor Base
19	040700	Gland
20	011900	Lateral Spacer M5x85
21	022200	Noise Reducing Foam
22	062200	Individual Motor Support
23	012400	Central Spacer M8x85
24	022400	Preassembled spacer
25	022500	Valve
26	042500	Plastic Spacer
27	042600	Metal Washer 110x80x15
28	012700	Terminal
29	013100	Anti-Interference Capacitor
30	063000	Circuit Board 4187-1 *110v Model: RP063001-110* *240v Model: RP063001-240*
31	010500	Disk ø100
32	012800	Cable Lock
33	012900	Lead Protector L49
34	013200	Power Cable 3x1,5 8,5MT
35	013000	Handle Bracket
36	010950	Vibrator 230V 50Hz
37	011000	6 Hole Washer
38	063800	Intake Gasket
39	063900	Intake Manifold
40	064000	Filter ø130 HEPA
0	0640H2	Filter ø130 h200 HEPA
41	013600	Filter Support Rod H260
42	013700	Ring Seal
43	013800	Ring Seal Support
44	013900	Throttle Spring
45	014000	Filter Surround
46	064600	Filter Protection
0	0646h2	Filter Protection h200

(IMAGE 2) HV240-ACS (C35) Parts Diagram - Vacuum Body & Base

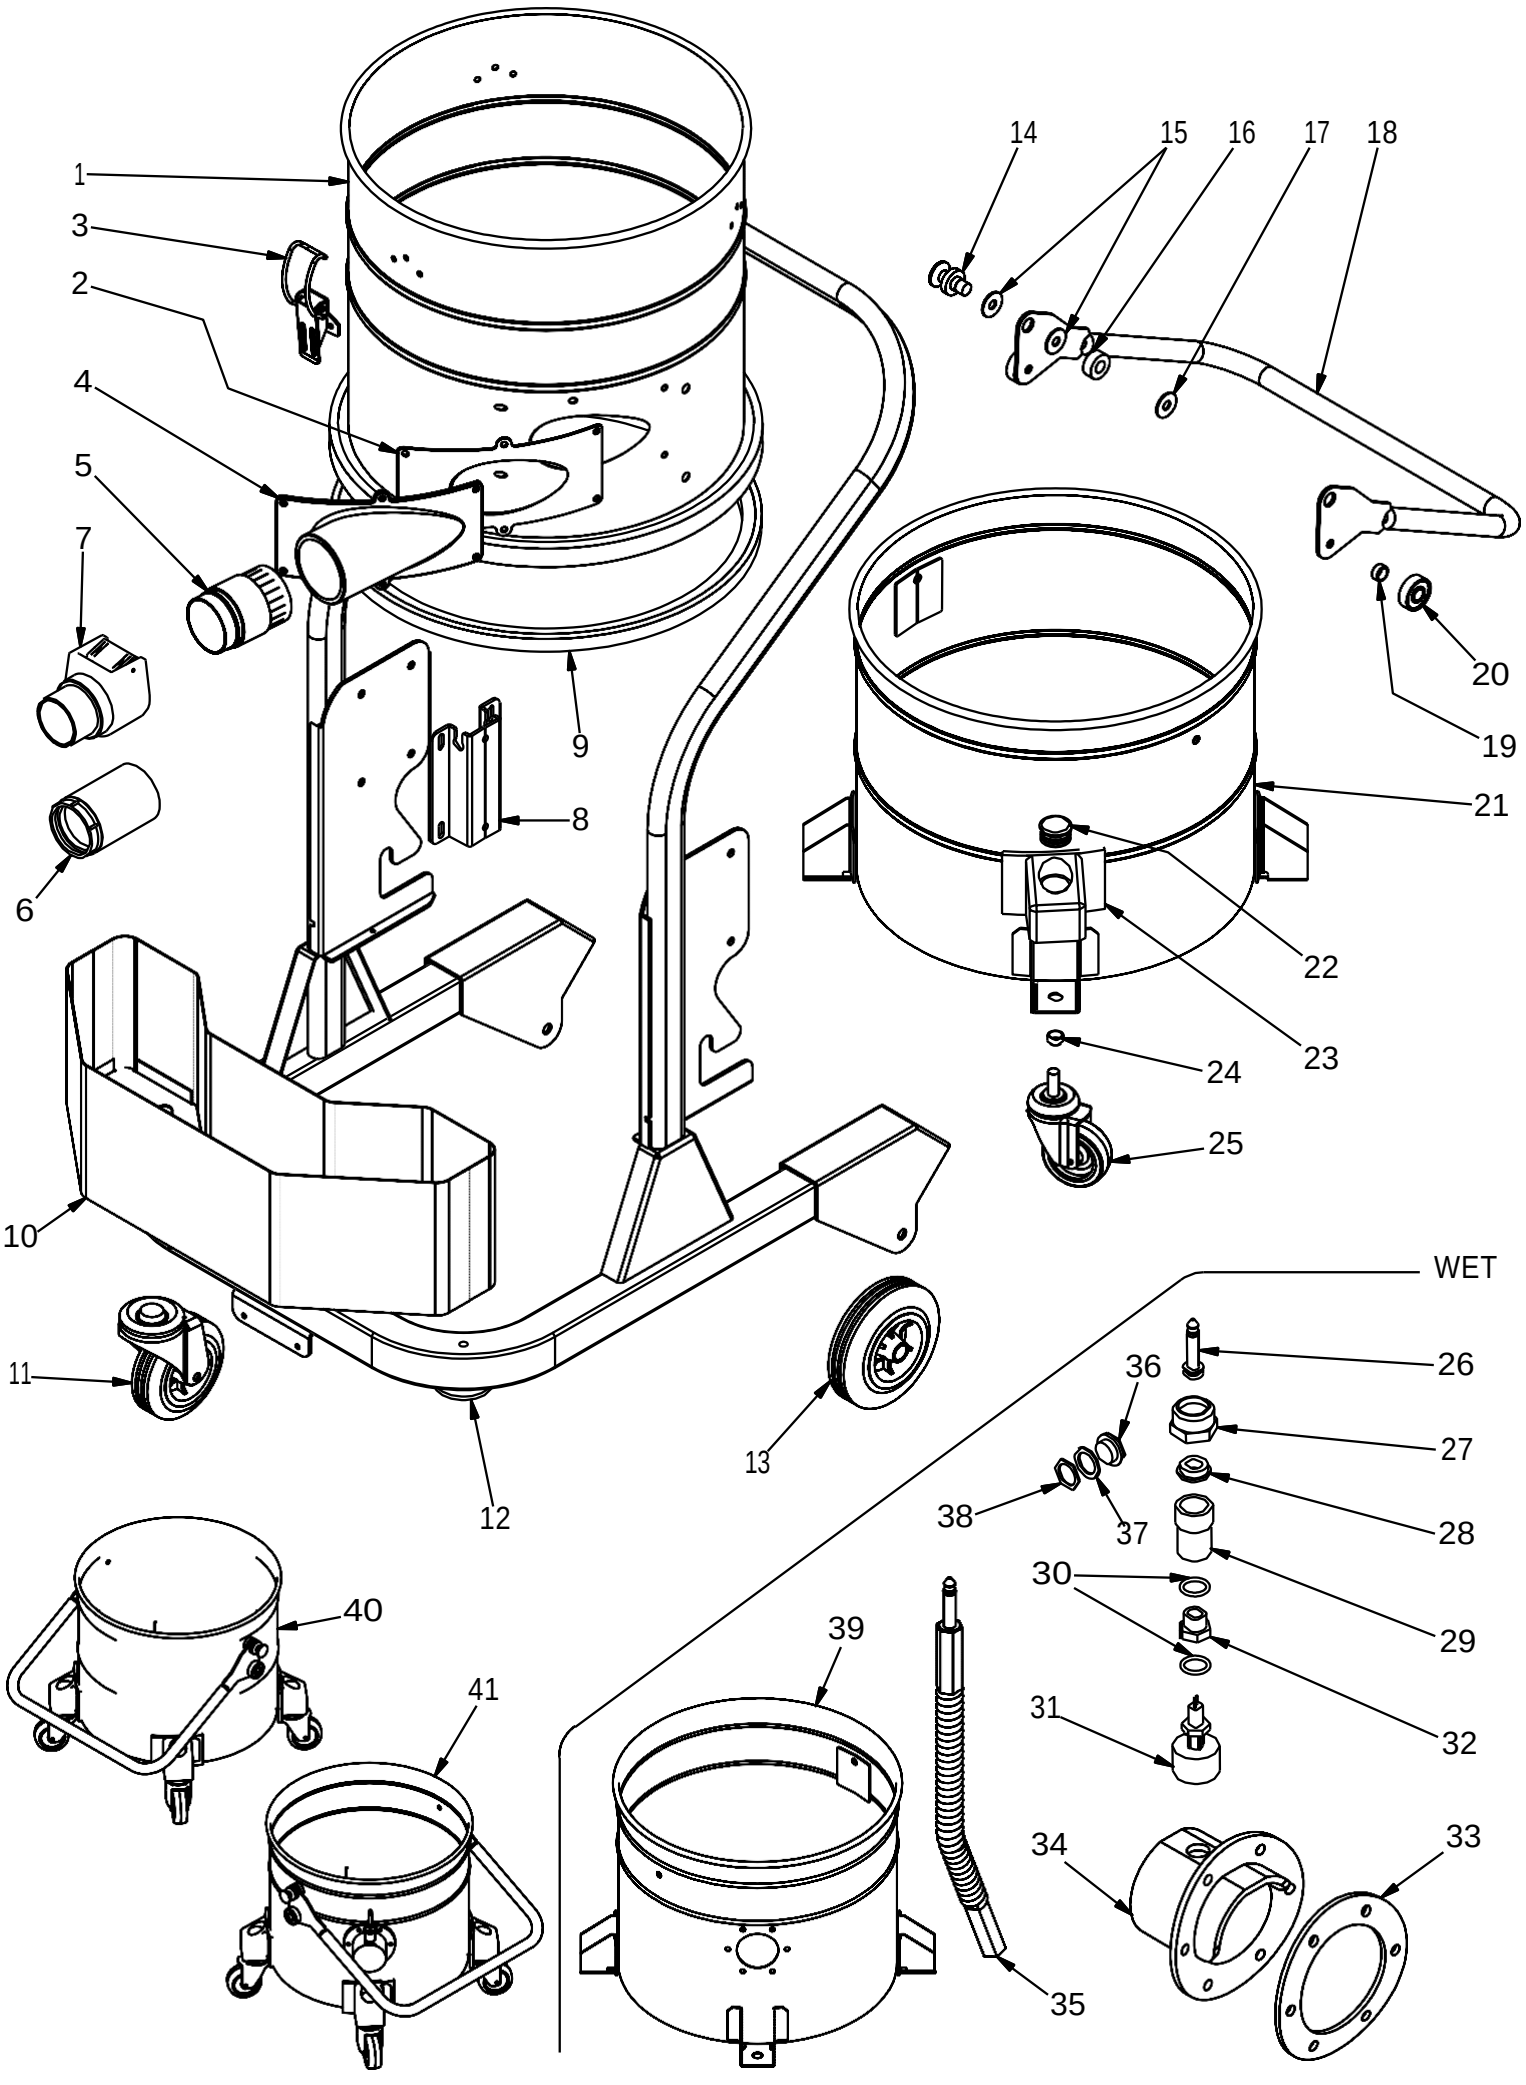

HV240-ACS (C35) Parts List - Vacuum Body & Base

POS	CODICE	DESCRIZIONE
1	080100	Filter Chamber Ø370 H360
	08010X	Filter Chamber AISI 304 Ø370 H360
	08010X4	Filter Chamber AISI 304 Ø400 H360
2	030300	Hose Connector Neck Sealing Pad
3	030200	Tank Clip
4	030400	Hose/Tank Connector
5	053200	Metal Union Connector
6	60-38PP	Machine Connector Swivel Ø38
7	60-50 AL	Aluminum Machine Connection 60-50
8	080800	Chamber Fixing Bracket
9	021600	Under-Head Tank Gasket
10	081005	Tool Storage Basket
11	081100	Swivel Wheels ø100
12	081205	Metal Frame
13	081300	Rear Wheel ø120
14	081400	Handle Holding Pin
15	081500	Nylon Washer 25x15x1,5
16	081600	Spacer 25x12x10
17	081700	Rubber Cork Washer 25x10x2
18	081803	Barrel & Hopper Lifting Handle
19	081900	Brass Spacer 12x8,5x10
20	082000	Bearing 6201RS
21	082100	Tank Drum H295
	08210X	Tank Drum AISI 304 H295
22	030800	Plug ø30
23	030700	Wheel Caps / Covers
24	030600	Spacer 15x7
25	030500	Tank Drum Wheels / Castors ø60
26	051900	Jack Plug
27	052000	Ferrule Nut 20x1 E2310007
28	052100	Fixing Jack Washer
29	052200	Threaded Sleeve 20x1 - PG7
30	052300	O-Ring Ø8
31	052400	Electric Float NC
32	052500	Reduced Sleeve PG 7x8 MA
33	052600	Electric Floating Container Seal
34	052700	Electric Floating Container
35	051800	Complete Spiral Cable Jack
36	053000	Level Indicator
37	051500	Gasket 1"
38	051200	Ferrule 1"
39	08390W	Waste Tank - wet
	0839WX	Waste Tank - AISI 304 wet
	0839WX4	Waste Tank - Ø400 AISI 304 wet
40	0840CV	Waste Tank - h295 Painted Finish
	0840CX	Waste Tank - h295 Stainless Steel Finish
41	0841CV	Waste Tank - h295 Electric Float complete
	0841CX	Waste Tank - h295 Stainless Float Complete
	0841CX4	Waste Tank - h295 Ø400 Stainless Float Complete

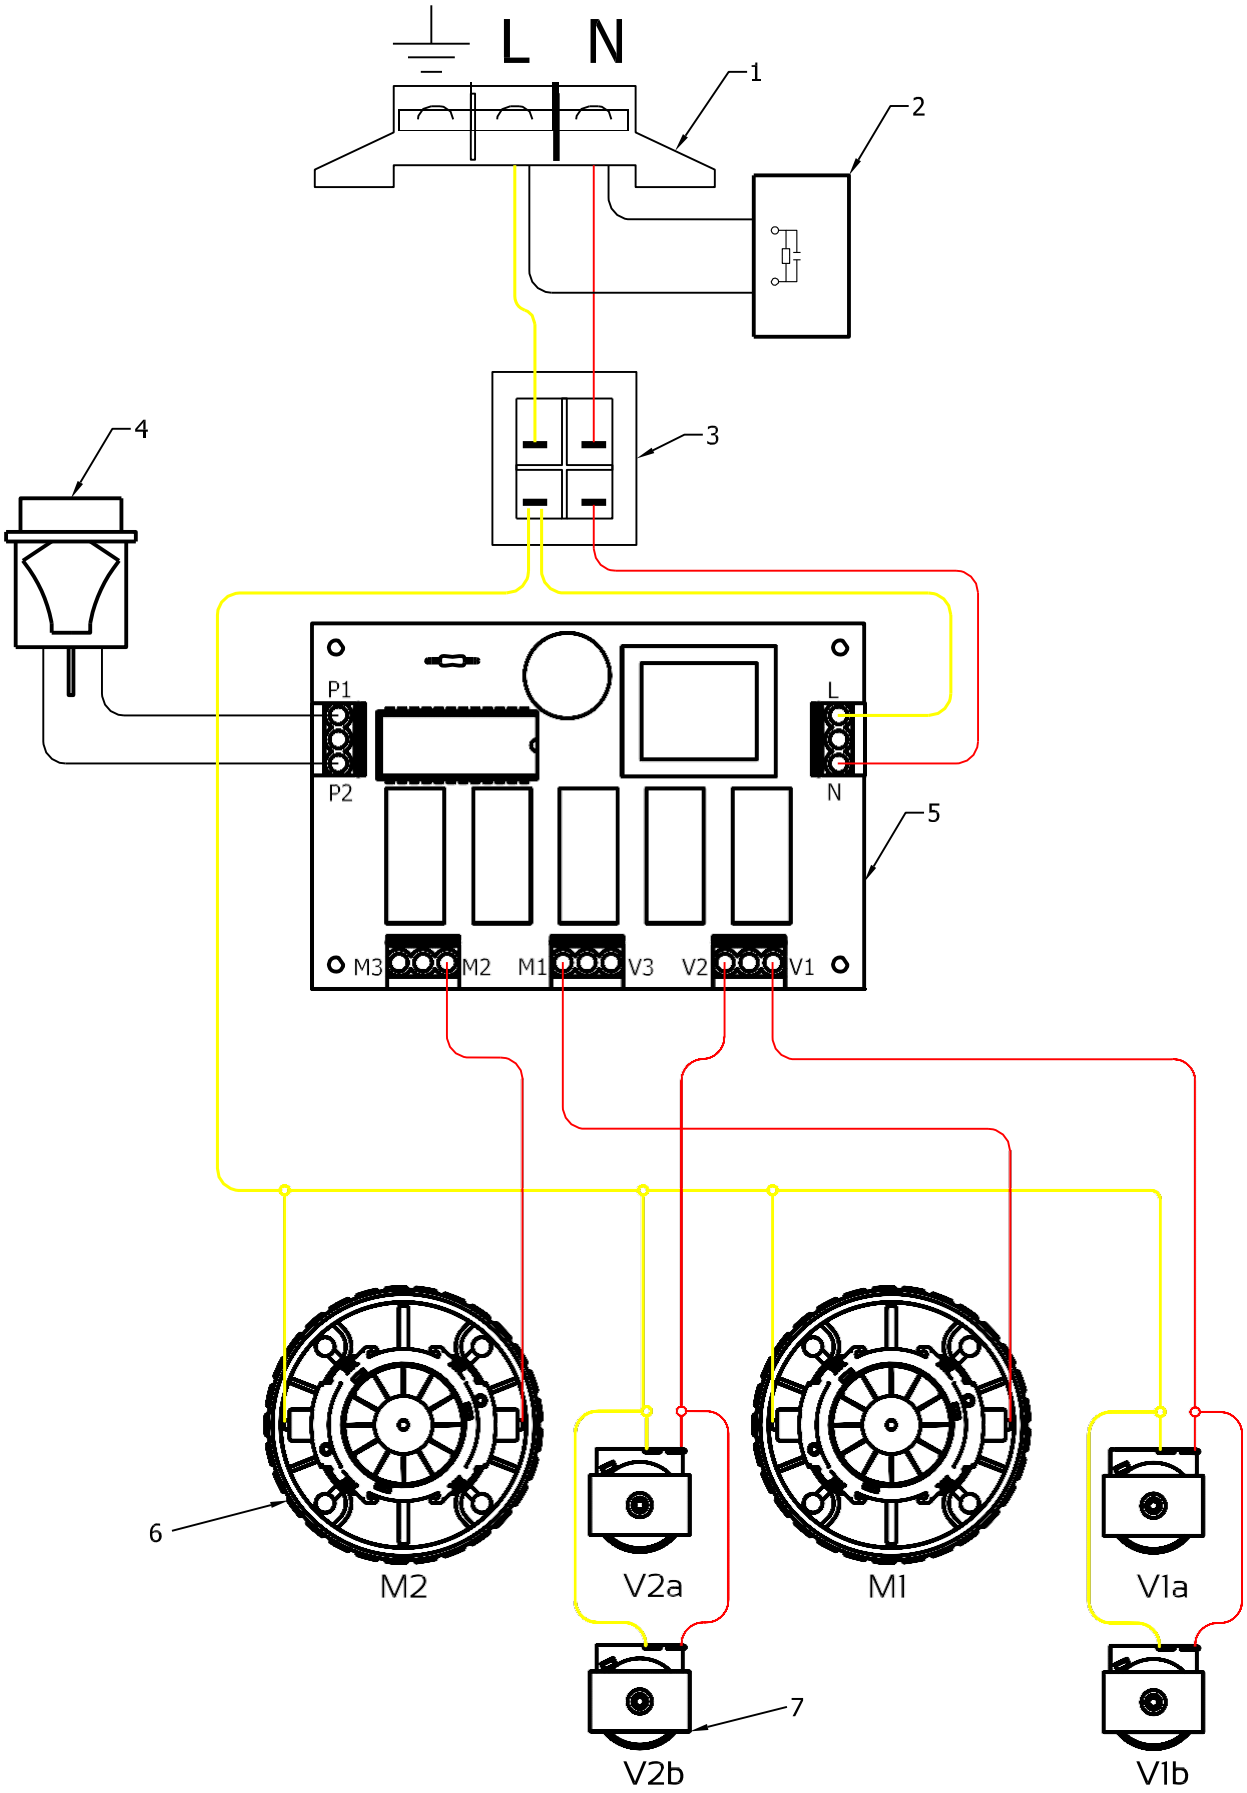

Parts List			
1	Terminal	5	Control Board
2	Suppressor	6	Bypass Motor
3	Toggle Switch	7	Vibrator
4	Switch		

HUUVAN

Creating Clean, Protecting Health

We supply a full range of cleaning equipment for rental or purchase.

For more information, or a cleaning solution to suit your business, please get in touch –

For a more comprehensive product range, please visit our website.

Distributed by:

Address

Crescent Industrial Ltd
Berrington House,
Berrington Road,
Leamington Spa
CV31 1NB

Contact

t: 0845 33 77 695
f: 0845 33 78 695
e: info@c-ind.co.uk

www.crescentindustrial.co.uk/huuvan/